

Jenny TV 2.8 - Table of Contents

1. Getting Started	3
1.1 Installing the SIM Card, SD Card and Battery.....	3
2. Input Type	4
3. Menu Guide	5
3.1 Messaging.....	5
3.2 Contacts.....	6
3.3 Call Center.....	6
3.4 Multimedia.....	6
3.5 Organizer.....	7
3.6 Settings.....	7
3.7 Audio Player.....	8
3.8 Calculator.....	9
3.9 Blu Club.....	9

Phone Overview



- + **Dimensions:** (H x W x D): 127 x 53.5 x 12.4mm
- + **Camera:** VGA
- + **Cable:** Micro USB
- + **Battery:** Lithium-Ion
- + **Rated Capacity:** 820 mAh
- + **Continuous Standby Duration:** (Relates to network status)
- + Please refer to the labels for data related to the battery and the charger

1. Getting Started

1.1 Installing the SIM Card, SD Card and Battery

A SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PUK (PIN Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, phonebook data, and short messaging data.

Installation

- ◆ Hold the End Key and power off the mobile phone if the phone is powered on.
- ◆ Pull the back cover and remove it.
- ◆ Pull the battery outward and remove the battery.
- ◆ Insert the SIM card into the SIM card slot ensuring that the card is properly aligned and that the gold contact of the card is facing down.
- ◆ The SD card is a mobile storage card that the phone may utilize to store different files. Please insert the SD card into the SD card slot.
- ◆ Insert the battery with the gold contacts of the battery facing the metallic contacts in the battery slot and press the battery down until it locks into place.

Phone Lock Code

The phone lock code is a security measure that may be set to prevent your mobile phone from unauthorized use. The initial phone lock code is set to 1122 and may be changed by the user. Once the lock code is set, it will need to be inputted when powering on the mobile phone.

PIN

The PIN (Personal identification number 4 to 8 digits) code prevents your SIM card from unauthorized use. Once a PIN lock is enabled, you will need to input the PIN any time the phone is powered on. The SIM card will lock if the PIN code is inputted incorrectly three consecutive times.

To Unlock:

- Input the correct PUK to unlock the SIM card.
- Input the new PIN and press the Selection key.
- Input the new PIN again to verify and then press the Selection key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

Note: *The SIM card will be locked if you input the wrong PIN code three times. To unlock the SIM card, you will need to input the PUK. The PUK code can be obtained from the network operator.*

2. Input Type

The mobile phone provides the following keys:

◆ **Dial key**

Press it to place a call by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records

◆ **End key**

Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on or off the mobile phone.

◆ **Left and right soft key**

The bottom line on the screen displays the functions of the Left and Right soft key.

◆ **Direction key**

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate.

◆ **OK/Selection key**

Press it to confirm your selection.

◆ **Number and letters**

Press number keys or letter keys to in input or edit state to input numbers or letters.

3. Menu Guide

3.1 Messaging

◆ **Write Message:** Through this feature you can create, read, or send a new message.

◆ **Inbox:** Received messages are listed in this location.

◆ **Drafts:** Drafts messages are listed in this location.

◆ **Outbox:** The messages which failed delivery or are temporarily stored in the Outbox.

◆ **Sent Messages:** Sent messages are listed in this location.

◆ **Broadcast Messages:** This network service enables you to receive a variety of text messages such as broadcast messages about weather forecast or road conditions. At the present time, few networks provide this service. Please consult with your network operator.

◆ **SMS Templates:** Choose from various default responses.

- ◆ **SMS Settings:** Set SMS messaging parameters.

3.2 Contacts

The phone book feature allows you to store, search, edit and delete phone numbers on your phone. You can also store contacts in the SIM card. The number of contacts that the SIM card can store depends on SIM card type and capacity.

3.3 Call Center

- ◆ **Call History:** The call history keeps record of missed calls, dialed calls and received calls and other call logs.

3.4 Multimedia

- ◆ **Mobile TV:** This function allows you to watch mobile TV.
Note: The mobile TV application only accepts OTA analog TV transmission signals.
- ◆ **Camera:** The phone provides a camera feature to capture pictures. In the camera interface, you may press the Selection key to take a picture, press up/down direction key to zoom in and out, and press the right/left direction key to adjust exposure. You may also press options for camera options.
- ◆ **Image Viewer:** Use this feature to view pictures or images.
- ◆ **Video Recorder:** This function enables you to record video.
- ◆ **Video Player:** Use this feature to play video files.
- ◆ **Audio Player:** Use this feature to access the audio player.
- ◆ **Sound Recorder:** The phone supports .WAV and .AMR file extensions.

- ◆ **FM Radio:** You can use the phone as a traditional FM radio. In the radio interface, you may press the left and right direction key to scan channels automatically, press the up/down selection key to search for channels manually, press the selection key to power on/off, and press * or # key to adjust volume.

3.5 Organizer

- ◆ **Bluetooth:** Bluetooth allows you can make a wireless connection to other compatible devices such as mobile phones, computers, headsets and car kits or send images, video clips, and sound.
- ◆ **File Manager:** You may use the file manager to conveniently manage various directories and files on the phone and the SD card and allows you to format data in the memory.
- ◆ **Games:** A F1 race game is embedded in the phone. For specific operation, please refer to ‘help’ option of the game.
- ◆ **Alarm:** There are five alarm clocks come available with the phone. You can set the date and time of each alarm and you can also set the alert tone.
- ◆ **Calendar:** This feature provides a monthly-view calendar to keep track of important appointments and daily events.
- ◆ **Torch:** Use this function to access the phone’s flashlight.
- ◆ **STK:** STK is a SIM card toolkit. The information provided varies depending on service provider availability.

3.6 Settings

- ◆ **Profiles:** The mobile phone provides multiple user profiles that may be customized to specific events and environments. Customize the user profiles according to your preference and then activate the user

profiles. The user profiles fall into four selections: **General, Silent, Meeting and Outdoor.** When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode. There is no option for activating the Headset mode on the screen. If you set Call Settings » Advanced Settings » Answer Mode to Any Key: all incoming calls will be automatically answered with any key.

- ◆ **Dual SIM Settings:** Adjust open SIM slots.
- ◆ **Phone Settings:** This function allows adjustment in time, date, language, shortcuts, and other changes.
Note: When flight mode is engaged, it will suspend signal-transmitting functions – thereby disabling the device's capacity to place or receive calls or text messages. Other functions that do not require signal transmission (e.g., games, built-in camera, and audio player) are still available.
- ◆ **Call Settings:** You can set caller ID, call waiting, call divert, call barring, line switching. **Advanced Settings:** Blacklist, auto redial, IP dial, call time reminder, answer mode.
- ◆ **Network Settings:** Access this function to set SIM and GPRS parameters.
- ◆ **Security Settings:** The security settings ensure the device is protected from unauthorized use.
- ◆ **Connectivity:** You can turn on/off data connection and manage data accounts through this function.
- ◆ **Restore Settings:** Use this function to restore factory settings. The pre-set password is 1122.

3.7 Audio Player

Use this feature to play audio files and control the audio player by pressing the direction keys: Play/Pause (Selection key), Previous Song/Next Song (Left and Right Direction key), and Fast Forward/Rewind (Long Press Right/Left Direction key), Song Mode (Up direction key), Restart (Down direction key). In audio player interface you may also press * or # key to adjust the volume.

3.8 Calculator

To use the calculator: Press the up, down, left, right and middle key to select +, -, ×, ÷, and = respectively.

3.9 Blu Club

This feature enables you to view the internet through a specified portal. You may log on Face Talk, Facebook, MSN, Yahoo, and Twitter through this feature.